

# Drum en tonercartridges voor zwart-witlaserprinters HL

	TN-200 / DR-200	TN-1050 / DR-1050	TN-2000 / DR-2000	TN-2005 / DR-2005	TN-2010 / DR-2200	TN-2110 / DR-2100	TN-2120 / DR-2100	TN-2210 / DR-2200	TN-2220 / DR-2200	TN-2310 / DR-2300	TN-2320 / DR-2300	TN-3030 / DR-3000	TN-3060 / DR-3000	TN-3130 / DR-3100	TN-3170 / DR-3100	TN-3230 / DR-3200	TN-3280 / DR-3200	TN-3330 / DR-3200	TN-3380 / DR-3200	TN-3390 / DR-3200	TN-4100 / DR-4000	TN-5500 / DR-5500	TN-6300 / DR-6000	TN-6600 / DR-6000	TN-7300 / DR-7000	TN-7600 / DR-7000
Zwart-witlaserprinters HL							HY	HY	HY	HY	HY	HY	HY	HY	HY	HY	HY	SHY					HY		HY	
HL-720 / 730 / 730plus / 760	●																									
HL-1030 / 1230 / 1240 / 1250 / 1270N																							●	●		
HL-1110 / 1210W / 1212W	●																									
HL-1430 / 1440 / 1450 / 1470N																							●	●		
HL-1650 / 1670N / 1850 / 1870N			●																						●	●
HL-2030 / 2040 / 2070N			●																							
HL-2035				●																						
HL-2130 / HL-2135W					●																					
HL-2140 / 2150N / 2170W						●	●																			
HL-2240 / 2240D / 2250DN / 2270DW								●	●																	
HL-5030 / 5040 / 5050 / 5070N																									●	●
HL-5130 / 5140 / 5150D / 5170DN												●	●													
HL-5240(L) / 5250DN / 5270DN / 5280DW														●	●											
HL-5340 / 5340D / 5340DL																●	●									
HL-5350DN / 5350DNLT / 5370DW / 5380DN																●	●									
HL-5440D / 5450DN / 5450DNT / 5470DW																		●	●							
HL-6050 / 6050D / 6050DN																					●					
HL-6180DW / 6180DWT																		●	●	●						
HL-7050 / 7050N																						●				
HL-L2300 / L2340DW / L2360DN / L2365DW										●	●															

\* Alle brother laserprinters maken gebruik van gescheiden drum en tonercartridges en zijn los te bestellen. HY= hoge capaciteit cartridge SHY= super hoge capaciteit cartridge

# Drum en tonercartridges voor kleurenlaser- en ledprinters HL

	*TN-04BK/C/M/Y	OP-4CL	*TN-11BK/C/M/Y	*TN-12BK/C/M/Y	*TN-130BK/C/M/Y	*TN-135BK/C/M/Y	DR-130CL	*TN-230BK/C/M/Y	DR-230CL	*TN-241 BK/C/M/Y	*TN-245 C/M/Y	DR-241CL	*TN-320BK/C/M/Y	*TN-325BK/C/M/Y	*TN-328BK/C/M/Y	DR-320CL	*TN-321BK/C/M/Y	*TN-326BK/C/M/Y	*TN-329BK/C/M/Y	DR-321CL	*TN-900BK/C/M/Y	
Kleurenlaser- en ledprinters HL						HY				HY				HY	SHY			HY	SHY		SHY	
HL-2700CN	•	•																				
HL-3040CN/3070CW							•	•														
HL-3140CW / 3150CDW / 3170CDW									•	•	•											
HL-4000CN			•																			
HL-4200CN				•																		
HL-4040CN / 4050CDN / 4070CDW					•	•	•															
HL-4140CN / 4150CDN													•	•		•						
HL-4570CDW / 4570CDWT													•	•	•	•						
HL-L8250CDN																	•	•				
HL-L8350CDW																	•	•	•			
HL-L9200CDWT / L9300CDWTT																				•	•	

\* Alle brother kleurenlaserprinters maken gebruik van vier gescheiden tonercartridges en zijn los te bestellen. BK= zwart C= cyaan M= magenta Y= geel HY= hoge capaciteit cartridge SHY= super hoge capaciteit cartridge